



USER MANUAL




SL827

This product is a slim charger for portable electronic devices. It is designed to charge mobile phones, iPods, iPhones, PDAs, PSPs, Mp3, Mp4 players, PMPs and other electronic devices anytime, anywhere.

Please read this manual carefully before using this unit.

PARTS INCLUDED:

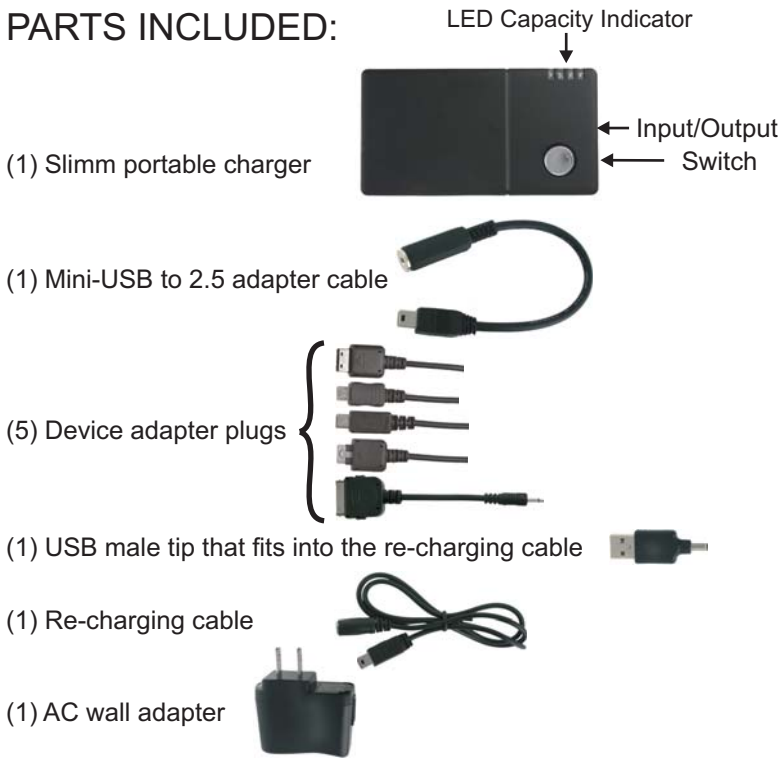

To charge your digital products with this charger:


Please use the tips provided when charging your products: (using other third party tips may damage your product and void your warranty)

After continuous use the unit may feel warm to the touch. This is normal.

1. Choose the correct tips for your digital products and connect to the adapter cable (A)
2. Connect the tips to your digital product (B).
3. Connect the Mini USB side of the cord (C) to the charger and then press the switch to charge your digital products. See diagram below:

Note: Do not unplug connection (A) while the charger is charging or in output mode. Doing so may make the charger unresponsive until reset.

If the charger becomes unresponsive or no longer turns on, you must reset the charger by briefly plugging it in to recharge (USB cable or AC adapter).

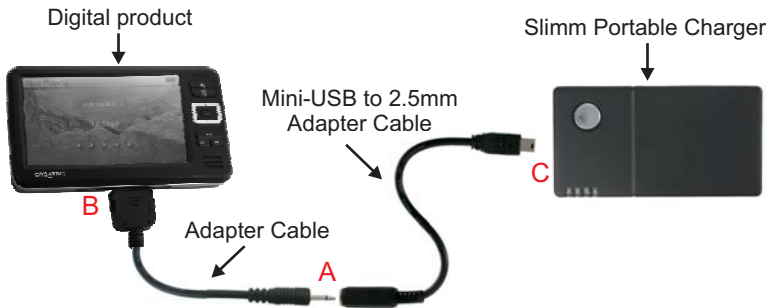

If the tip you require is not included in this package, additional tips are available at www.adrenalinetech.com (S&H apply)

Product Specification


Capacity: 2000mAh/3.7V
Input voltage: DC5.0V-5.5V
Input current: Max 800mA
Output voltage: DC5.5V±0.2V
Output current: Max 600mA
Charging time: About 4.5 hours
Cycle life: ≥ 500 times

Security and Precautions

Do not strike the product with any blunt or sharp object.
Use an adapter with an output of 5.0V-5.5V to charge this product.
Confirm the working voltage of your device before charging.
Never put the charger in water or close to fire.
Do not store the product in extreme high or low temperatures.
Do not disassemble or tamper with the unit.

Adrenaline Technologies LLC.
125 Commerce Drive, Hauppauge, NY 11788

Charging diagram:

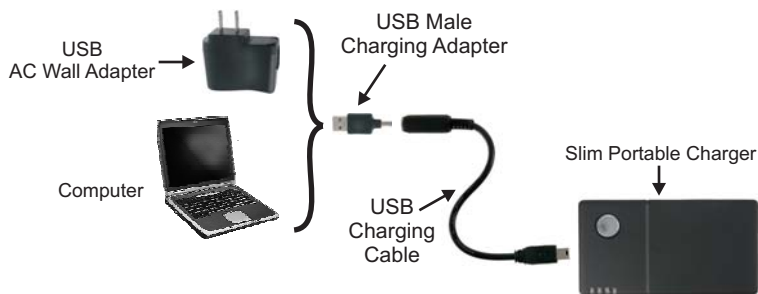

This unit has four LED lights to indicate the charge status. Each light represents 25% of the unit's capacity. When charging the product the number of LED's flashing will indicate charge status. When fully charged, all the indicator lights will flash at the same time.

Note : *After you press the switch, the charger will be in the output mode for 15 seconds. Please do not press the switch before you start to charge your unit. The unit will not accept a charge for 30 seconds after the switch has been pushed.*

This unit will discharge over time when not in use.

To ensure full charge, it is recommended to charge no less than once every three months.

After continuous use the unit may feel warm to the touch. This is normal.

After you have finished charging your devices, remove the cable to preserve the remaining charge capacity of this unit.

Checking capacity function:

Press the switch to check the charge capacity of the portable charger.

The number of LEDs indicate the charge status (0- 0%, 1-25%, 2-50%, 3-75%, 4-100%)